


8. Put the two wires for the push pull switch inside the existing ignition/ key switch loom and push the loom through the original hole.
9. Remove the knob, retaining nut and washer from the switch and connect it to the harness. Insert the shaft of the switch into the hole previously drilled and secure using the washer and nut and reattach the knob. Reconnect the wires to the ignition switch.
10. Connect the harness to the headlights
11. Run the remaining wire looms toward the rear of the car, following the frame. Connect the short loom to the driver side taillight and the long loom follows the rear frame cross tube and connects to the passenger side.
12. Make sure the wires and push/pull switch are not touching the frame or any metal parts on the car.
13. Connect the positive wire of the loom to the positive terminal of the battery or power supply.
14. Pull the push/pull switch to the "on" position
15. Briefly touch the negative wire to the negative terminal. Light sparks are normal, but a bright, arcing flash indicates a short in the system. If the lights illuminate correctly, push the push/pull switch to the "off" position and connect the wire to the terminal.
16. Inspect the wiring installation to make sure nothing is pinched or rubbing and that no portion of the harness is below the frame. Secure harness as needed with zip ties.
17. Reattach switch panel and lower the car from the jack stands.

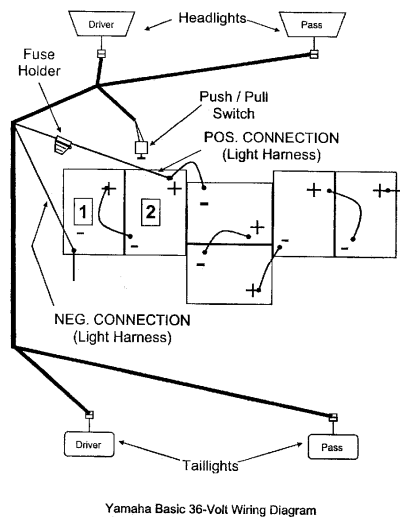

#### Head Light Adjustment

1. Position the golf car on a level surface approx 8' in front of a wall.
2. Turn on the headlights and observe where the center of each beam shines on the wall. A basic starting position is 28" up from the floor.
3. To adjust, simply turn the screw on the face of the bezel. Clockwise to raise the beam and counter-clockwise to lower the beam being sure not to completely remove the screw.



## Light Kit Installation Instructions

E-Z-GO TXT

LGT-304



#### Contents of LGT-304, E-Z-GO TXT Light Kit:

- a (1 ea) Left/Right Headlight assembly
- b (1 ea) Left/Right Taillight assembly
- c (1) Wiring harness w/ switch
- d (16) Screws
- e (10) Zip ties
- f (1) Installation Manual with templates

**Caution:** Before starting this project, remove the system positive & negative connections from the battery or battery pack. Please read through the instructions carefully.

#### Headlight/Taillight Cut-outs

1. Cut out the headlight from the template. Place the template on the **driver** side front cowl facing up and out. Carefully position the template and tape into place, using caution with freshly painted surfaces. Mark the cut out area and remove the template.
2. Apply masking tape along the outer edges of the lines. This provides protection for the cowl surface.
3. Carefully drill a hole on the inside corners of the lines using a drill bit large enough for the saw blade. Do not drill outside of the lines.
4. Using a jig or roto saw, insert the blade into one of the holes and carefully cut along the marked line until the piece of cowl is removed. Remove the tape. Use a file or 80 grit sandpaper to smooth the edges.
5. Flip the template over and repeat steps 1-4 on the passenger side.
6. Cut out the taillight from the template. Place the template on the **driver** side rear body facing up. Carefully position the template and tape into place. Mark the cut out area and remove the template.
7. Repeat steps 2-4 for the taillight.

#### Headlight/Taillight Installation

1. Insert the driver and passenger headlight assemblies into their respective holes and check for overall fit. File or sand the cut out if necessary. Align both bezel assemblies and tape into place. Take some reference measurements and step back to visually ensure proper alignment.

2. Once the headlights are properly aligned, fasten the headlights to the cowl. On the driver side, use the bezel as a template to drill a 1/32" hole in the cowl on the upper inside corner. Insert, but do not tighten, the included 1/8"x3/4" screw. Repeat this on the lower outside corner. Now drill the two remaining holes and insert two more screws. Hand-tighten, using caution not to over tighten the four screws
3. Repeat steps 2 for the passenger side.

#### Push/Pull Switch Cut-out

1. On the removable ignition switch panel, center punch the plate 1 1/4" from the right edge and centered horizontally. Carefully drill a 3/8" hole for the new switch, being sure not to drill into any wires or other components. Remove the panel by removing the 2 rivets at the bottom of the plate. Mark and disconnect the wires from the ignition switch. Using a file remove any sharp edges and set panel

**Note:** This light kit is designed to be used with 12V-DC Power Only! On gas cars and electric carts equipped with 12 volt batteries you can connect to the positive and negative terminals of the 12V battery. On 48V systems with 8 volt batteries you must use a voltage reducer.

#### Wire Harness Installation

1. Make sure the positive and negative connections from the battery or battery pack have been removed.
2. Raise the front of the car and set it securely on safety jack stands. Make sure the car's safety brake lock is "ON" and the rear wheels are blocked.
3. Remove the push/pull switch from the wiring harness.
4. Reach up under the front cowl and gently pull the ignition/key switch wire out of the hole in the splash shield and remove the tape from the end, set aside.
5. Starting in the battery/engine compartment on the passenger side, position the wiring harness with the two taillight wires going toward the rear of the car.
6. Following the car frame and existing harness, thread the new light kit harness with front headlight connectors and ignition switch connectors towards the front and up under the center of the cowl.